



```

avrdude-6.3
cd ..
vi .avrduderc
programmer
id = "ft232r";
desc = "FT232R Synchronous BitBang";
type = "ftdi_syncbb";
connection_type = usb;
miso = 1; # RxD
sck = 2; # RTS
mosi = 0; # TxD
reset = 4; # DTR
;
ISPピンの並びはPICKIT2に合わせた。
(1)RST/MCLR(2)VDD(3)GND(4)MISO/PGD(5)SCLK/PDC(6)MOSI/AUX

```